



## 4-month calendar (single block) | single-sided printing

#### Calendar:

Final Open Format: 300 × 560 mm

### **Advertising space:**

Document format to deliver (TrimBox): 300 × 162 mm


Final Format (visible advertising space): 300 × 150 mm

### Calendar pad:

**Final Format:** 300 × 420 mm

#### General information:

- 12-sheet calendar (see page 4 of the PDF for details on the calendar)
- Red date indicator, pre-installed
- Papier Calendar pad: 70 g/m<sup>2</sup> Recyclingpapier Papier Header: 305 g/m<sup>2</sup> Recyclingkarton Papier Blockrückwand: 400 g/m<sup>2</sup> Graukarton
- Please provide a single page PDF.
- Maintain a 15 mm safety clearance on the top edge. (perforation)
- · 12 mm for the adhesion to the calendar block are folded on the bottom edge of the advertising space and are afterwards no longer visible.
- · A tear perforation is located on the header of the calendar block.
- Please see page 2 of this fact sheet for more information.

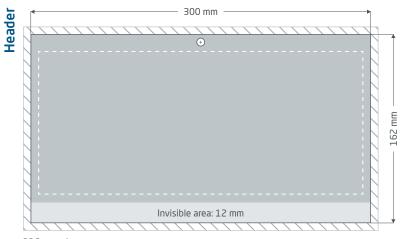

PDF page 1

Elements that extend to the edge of the page require a bleed margin. This area can be cut off during further processing.

Document format to deliver incl. non-visible area (TrimBox)

(+) Punched holes: Diameter 5 mm





Safety clearance: to the edge, min. 5 mm, to the top 15 mm

Due to manufacturing tolerances, important text and image elements should have a safety clearance from the edges of the final format.

Final Format: Size of the finished product (visible advertising space)



## Product-specific data preparation » Single block monthly calendar



# **C** Format adjustment


Please always follow the instructions in the test report. If you provide an incorrect page format, incorrect TrimBox or incorrect page orientation, we will place your data centred and unscaled in the ordered page format and inform you before you authorise the printing.



## **Perforation**

With this perforation, important print elements (e.g. text) must be positioned with a safety clearance of at least 15 mm from the top edge of the Trimbox so that it does not become perforated during processing.


The perforation of the mounting is always located on the top side starting at 6 mm.





### Folded area

At the bottom edge of the advertising space (final format), 12 mm are folded for adhesion to the calendar block and are afterwards no longer visible. Please do not place any important print elements there. Elements that reach the border (areas, images), however, must extend at least 2 mm into the non-visible area to prevent white trappings (due to processing tolerances). The header is additionally slit at the height of the fold to ensure flat mounting.

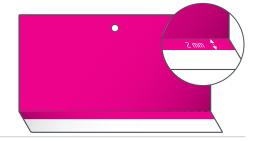



### Guide on preparing print data

In order to achieve an optimal print result, please consider the following items when creating your print data:

#### File format

Please send us a PDF or JPG file that is ready to print. We recommend that you create a PDF file according to the PDF/X-1a, PDF/X-3 or, preferably, the PDF/X-4 standard.

#### Colour space and ink coverage

All elements of the document should be created in CMYK mode. We will automatically convert data created in another colour mode (e.g. RGB, LAB, spot colours) to CMYK. We do not assume any liability for resulting colour deviations or non-display of objects, especially in connection with transparencies or unknown special colours. Furthermore, please provide your print data with the corresponding ICC profiles for standardised offset printing. For coated papers use the colour "PSOcoated\_v3.icc" and for uncoated papers the profile "PSOuncoated\_v3\_FOGRA52.icc".

Please create grey areas and black texts exclusively in the black channel. Objects with a total colour application of over 320%, exceeding the limit for printing, will be reduced to this 320% total colour application for production reasons.

#### Resolution of images and graphics

Generally, we recommend a resolution of at least 250 ppi (dpi), and at least 1,200 ppi (dpi) for line art.

#### Page format, page alignment, and page bleed

Please make the page format and page orientation equal for all sides and according to your desired print job. Elements that extend to the edge require a bleed margin. Furthermore, we recommend that you maintain a safety clearance at the edge of your document by not placing any text or important elements due to possible manufacturing tolerances. If the page format or page orientation in your print data differs from the requirements listed herein, we will place your template centred and unscaled in the ordered page format and we will notify you thereof before you give the approval for printing. We cannot accept any liability for resulting complaints.

Please embed all the fonts that you use in your print file. We will not replace missing fonts. For optimum readability, we recommend a minimum font size of 5 points.

### Lines

The line weight of graphics and text outlines should be at least 0.2 pt. We automatically thicken excessively thin lines to this minimum printable size. Please note that this can also cause lines created with 0 pt to become visible or thicken text outlines that are too narrow.

#### Overprinting, non-printing elements and layers

Please remove all non-printing elements from your document. PDF files should not contain any layers. Check if the overprinting settings are correct.

## **C** Format adjustment

During the ordering process and as part of the selected data check, we check your print data to see if the page format of your print data matches that of the ordered product, among other things. Only the "TrimBox" is important in this case. You can freely define the size of the possible BleedBoxes according to your needs.


#### Final Format (TrimBox):

The TrimBox describes the trimmed final format of a page.

#### BleedBox:

The BleedBox defines the bleed of a page. With a bleed of 3 mm, the BleedBox will be 3 mm larger all around than the final

You can check the TrimBox of your PDF file using the Adobe Acrobat Reader and Adobe Acrobat programs. Unlike Acrobat,

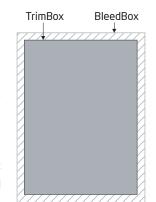

Adobe Reader has very limited functionality. For instance, you cannot alter PDF documents with Adobe Reader. You must use Acrobat to do

You can display the TrimBox or final format in both programs as follows: Open the "Presets" in the menu and from there, activate "Page display" » "Page contents and information", activate the "Show art, final format, and BleedBox" menu item. Afterwards, the TrimBox will be displayed with a red border and the BleedBox with a blue border in the corresponding PDF file.

If there are discrepancies between the page formats of the ordered product and their print data, we adjust the format. In other words,

we place your data centrally and unscaled in the ordered page format and notify you both in the test report of the data check and in a separate window before the order is completed.





① Print data check successfully completed with messages (Preview / Test report)

In our prepared, low-resolution preview file, you can check the status of your file. If the format is adjusted, we always add crop marks for you in this preview.



We do not check the contents of your data at all. The print data is checked automatically. Please make sure that you always adhere to the instructions of the data check print area in the online website. We recommend that you use "advanced data check". We assume no responsibility for problems arising due to failure to adhere to this data sheet and the data handling guidelines on our website!



# View of the calendar design » 4-month calendar (single block)



- German/3-language D/GB/F
- Label for German holidays
- Label for national holidays in D/A/CH/D/E/F/GB/I/NL
- Colour: light grey/black, Sundays/holidays in red (HKS 14)

**View at 100%** 

29	30	31		
Januar January Janvier				
Montag Monday Lundi	Dienstag Tuesday Mardi	Mittwoch Wednesday Mercredi	Donnerstag Thursday Jeudi	Freitag Friday Vendredi
			100	
5	6.00	7	8	9
12	13	14	15	16
19	20	21	22	23
26	27	28	29	30
Februar February Février				
Montag Monday	Dienstag Tuesday	Mittwoch Wednesday	Donnerstag Thursday	Freitag Friday